


Made in Italy

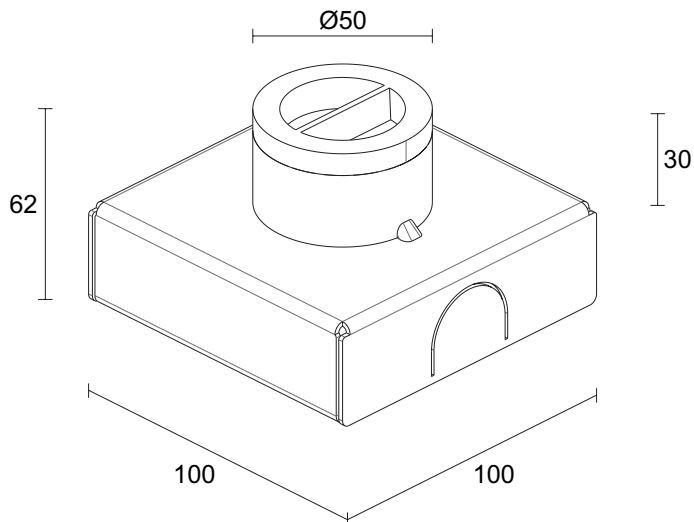


WC0400

Accessories / Accessori / Accessoires / Zubehör / Accesorios




1

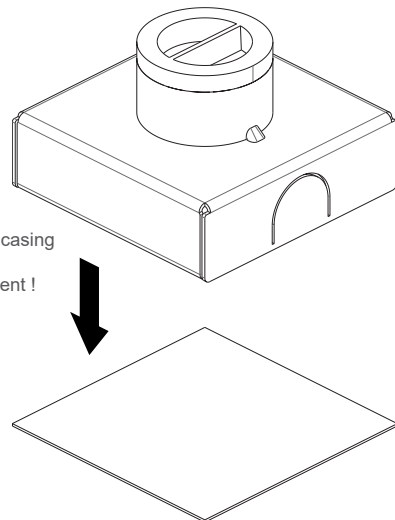


Fit the plate on the bottom of the outer casing
Tappare il fondo della cassaforma!
 Boucher le fond du boîtier d'encastrement!
 Boden des Gehäuses verschließen!
 ¡Tapar el fondo de la caja de empotrar!

2

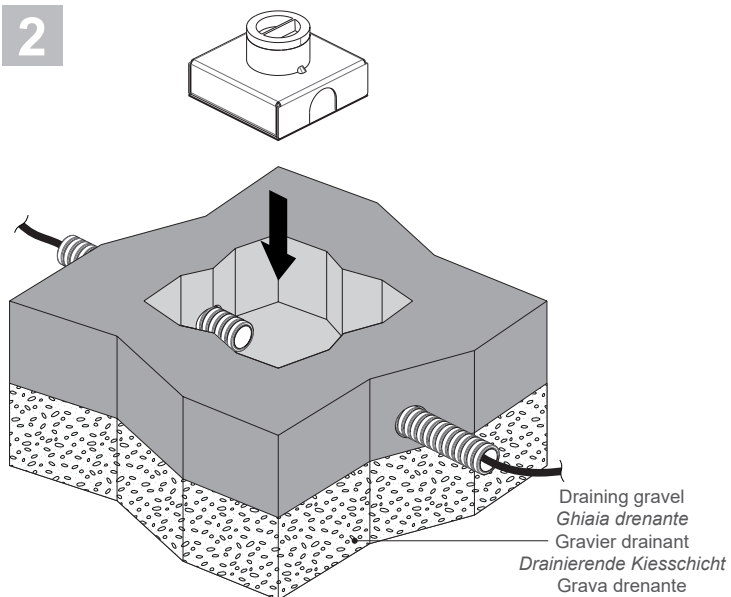


3

Position flush to the finished floor! / *Posizionare a filo pavimento finito!*
 Positionner au ras du sol fini! / *Bodenbündig positionieren!*
 Colocar a ras de suelo acabado!

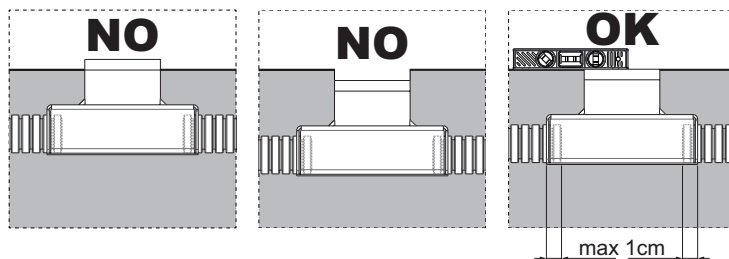

4

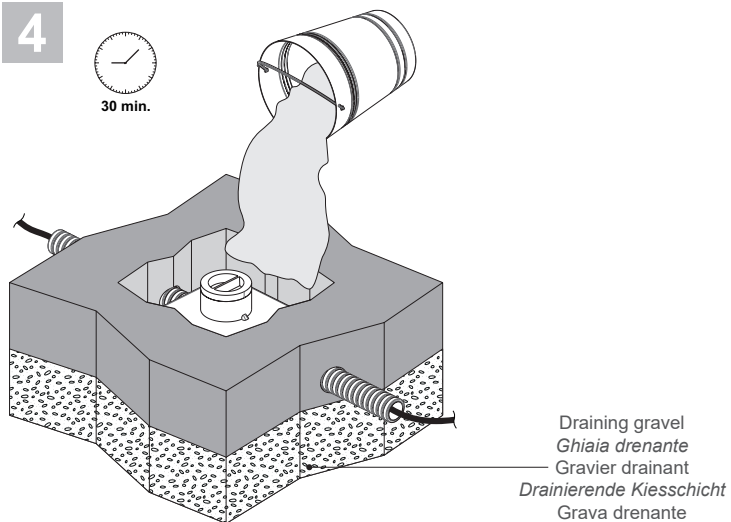

5

